



# GL6 User Manual

## Brushless Electronic Speed Controller

[www.xc-bldc.com](http://www.xc-bldc.com)



### Disclaimer

First of all thank you very much for using this product! This product has high power and incorrect use may cause equipment damage or personal injury. Please read this statement carefully before using this product. Once this product is used, it means that you agree to all the terms of this statement. Please use this product strictly in accordance with the instructions in this manual. We do not assume any liability arising from misuse, illegal modification or improper operation of this product, including but not limited to indirect losses or joint and several liabilities.



### Cautions

Before connecting the ESC to related equipment, please ensure that all wires are well connected and the connecting equipment are in well insulated protection to avoid damaging the ESC due to short circuit.

Before using the ESC, please carefully read the instructions of the matching power equipment and frame to ensure a reasonable power combination, thereby avoiding improper power combination that may lead to motor overload and damage to the ESC.

## 1. Specifications:


Item	Description	Cautions
Current	200A Continuous Current	Extra fans for ESC and motor cooling is necessary, or overheating protection may be activated
LiPo Cells	3~8S LiPo	Discharge/brake energy recovery should be considered when DC supply is applied If the supply is limited, degrade the operating parameters appropriately(acceleration and brake items)
Preferred Motor	GL-series sensored brushless motors	
Motor RPM	Max.Electrical Rotation Speed100K RPM	
BEC Voltage	Voltage: 6V/7.4V/8.4V adjustable using mobile App Current: 8A Continuous, 25A Peak	
Fan	Temp.Control and On In "On" mode, fan is on when ESC starts In "Temp. Control" mode: Fan starts when ESC temp. is above 55°C; Fan stays off when ESC temp. is below 50°C	Fan's powered by ESC When fan experiences short circuit protection, power supply will be cut off by ESC. Then supply will be restored in 1 second.
APP	XC-Link.	Download from XC-ESC website or Apple store
Bluetooth Communication	1.All parameters of ESC can be adjusted on APP 2.Firmware upgrade using App 3.Real-time data and data log reading	
Dimension	69.2*56.8*42.5mm / ~261g (with wires)	
Motors Recommended	GL4990	Even a motor is recommended, the GL6 ESC works with all GL-series motors, for other motors please visit website

## 2. Features:

- 2.1 FOC high speed slip ring, Microsecond level current control, smooth torque output
- 2.2 Self-developed speed control technology, switch freely between ultra low speed with large torque and burst-out with high speed
- 2.3 Self-developed servo algorithm, not particular to load, easy to use
- 2.4 Smart heat dissipation, fan stays quiet at low temperature
- 2.5 Built-in Bluetooth connecting mobile App for firmware upgrade and parameter setting
- 2.6 Mobile App for real-time data and data log reading
- 2.7 Built-in DC/DC conversion circuit improves power loading capacity of BEC
- 2.8 Multi-protection includes low voltage protection/throttle loss protection/abnormal braking protection/overheating protection
- 2.9 Turbo timing is available
- 2.10 You can completely control the ESC without need for additional modules
- 2.11 Supports X.BUS for ESC control and operation data reading, also applicable to robot or automation programming control
- 2.12 Supports X.BUS for ESC control and operation data reading, also applicable to robot or automation programming control

## 3. Connections:


Remark: A/B/C of Motor and ESC must be connected correspondingly,  
That is: Wire A of motor matches wire A of ESC, wire B of motor matches wire B of ESC,  
wire C of motor matches wire C of ESC

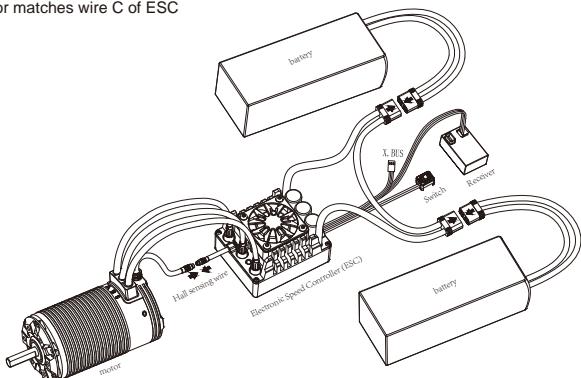

#### \*Precautions:

1. Don't connect wires (+) (-) reversely. We shall not be liable for any damage caused by reverse connection.
2. Sensor wire must be connected in use
3. A/B/C wires of motor must connect to A/B/C wires of ESC correspondingly
4. Check the wire connection before using. It is recommended to apply throttle slowly at beginning, when confirming all is correct, the throttle can be applied normally.

Switch wire: red and black  
Throttle wire: red: BEC+, black: BEC-, white: throttle  
X.BUS wire: red: BEC+, brown: BEC-, yellow: X.BUS

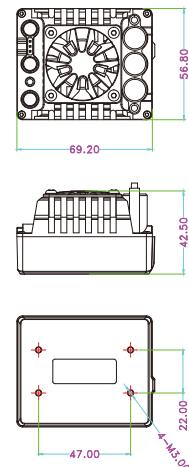


## 4. Start the process:

Steps:

1. Check whether the circuit is open, short circuit or in poor contact.
2. Check whether the motor is stuck.
3. Plug in the power cable.
4. Turn on the power button.

When you hear the battery prompt tone (described in the "Normal Startup" prompt in the light/sound prompt section), the startup is normal. If the throttle is normal, you can perform the throttle operation normally.

## 5. Set the throttle range:

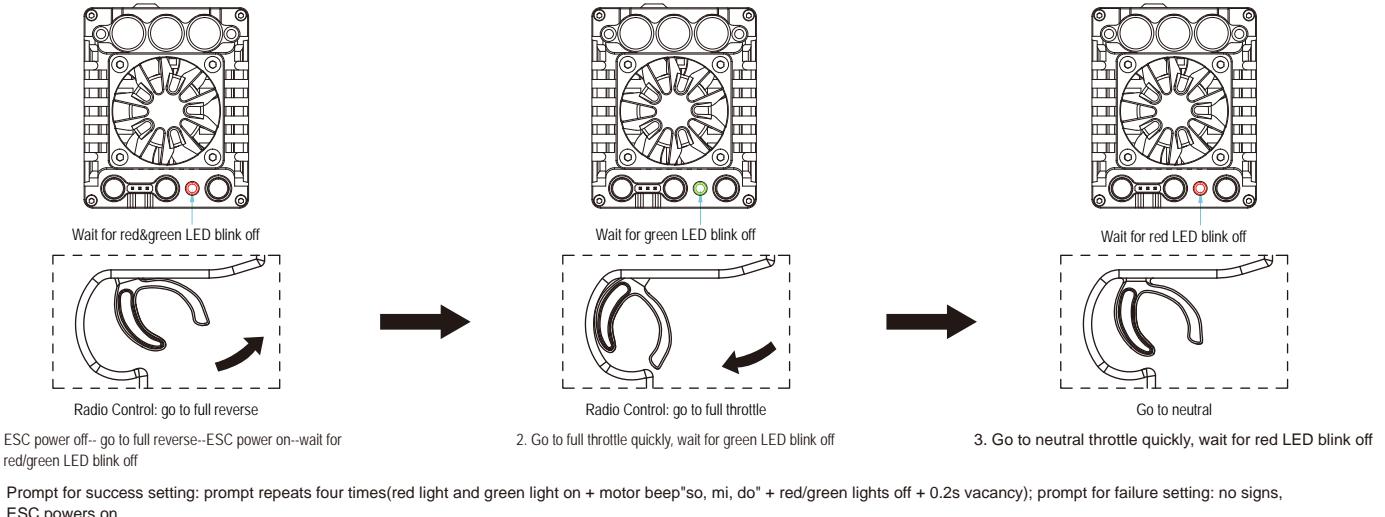

## 6. Bluetooth:

The naming rule of Bluetooth name is "model" + ":" + "ESC code ID", for example, "XC\_GL6-1C89", where XC\_GL6 is the general model, and "1C89" is the hexadecimal code ID of the ESC, to avoid two devices with the same name. Default password is "1234".

## 7. Configurable items:

Seq	Items	Parameters									Default
1	Running Mode	Forward/Reverse with Brake	Forward/Reverse								Forward/Reverse
2	LiPo Cells	Auto Identify	3~8S								Auto Identify
3	BEC Voltage	6.0V	7.4V	8.4V							6V
4	Cutoff voltage	Disable	2.9~3.6V								3.2V
5	Motor Rotation	CW	CCW								CW
6	Torque Compensation	1~8 level									6
7	simulation inertia	1~8 times									4
8	Drag Force	0~100%									40%
9	Max. Brake Force	25~100%									40%
10	Max. Throttle	25~100%									100%
11	Max. Reverse Force	25~100%									50%
12	Acceleration	0~12									8
13	Turbo Timing	0~24									0
14	Turbo Delay	0~1s									1s
15	Neutral Range of Throttle	3~15%									7%
16	PLine1	X.BUS	6	7	8	9	12	13	14		X.BUS
17	X.BUS-ID	0~15									0
18	Cooling Fan	Temp. Control	On								Temp. Control
19	Motor Parameter Identification	Close	On								Close

### 1. Running Mode:

#### Option 1: Forward/Reverse with Brake

Reverse is available in this mode for training. When trigger goes to reverse range, braking is activated

#### Option 2: Forward/Reverse

When the throttle trigger is pushed from neutral to reverse point, the motor reverses. This mode is generally used in special vehicles.

### 2. Lipo Cells:

Set the correct value according to the actual number of Lipo batteries used. The default is automatically calculated.

### 3. BEC Voltage:

BEC voltage support 6V/7.4V/8.4V. Generally, 6.0V is suitable for standard servos, while 7.4V/8.4V is suitable for high-voltage servos. Please set according to the servo specifications. WARNING! Do not set the BEC voltage above the maximum operating voltage of the servo, as this may damage the servo or even the ESC.

### 4. Low Voltage Cut-Off:

This will protect Lithium battery from irreparable damage caused by excessive discharge. ESC monitors the voltage of batteries all the time, once the voltage remains below the preset value in 10 seconds, the usable power will be reduced to 20% of max power.

### 5. Motor Rotation:

For motor rotation setting. Due to some differences in drivelines in different cars, it is possible that cars go opposite direction when applying throttle. If this happens, you can change the motor rotation direction, "cw" or "ccw".

### 6. Torque Compensation:

It refers to outputting max torque when encountering obstacles. The higher the level, the bigger the torque. Default value is recommended to avoid damage to drivetrain.

### 7. Simulation Interia:

Simulation coasting effect of brushless RC car. The bigger the value, the longer the coasting distance. A small value is recommended for crawling and higher levels for straightway running

### 8. Drag Force:

The drag brake will be activated when throttle goes to zero and motor speed is below 900RPM in order to prevent sliding. Higher values are recommended for crawling and low values for speed racing.

### 9. Max. Brake Force:

This ESC provides proportional braking function; the braking effect is decided by the position of the throttle trigger. It sets the percentage of available braking power when full brake is applied. Large amount will shorten the braking time but it may damage your pinion and spur gear.

### 10. Max. Throttle:

Refer to setting the max forward throttle. That is, max forward throttle is limited to this value (percent of full throttle).

### 11. Max Reverse Force:

Refer to setting the max reverse force. That is, max reverse force is limited to this value (percent of full throttle). A small reverse force is recommended to avoid accidents caused by reversing fast.

### 12. Acceleration:

Acceleration interacts with torque compensation to achieve motor accelerating control. If the lowest acceleration is preferred, you can select the lowest level of torque compensation, so is the acceleration, and a higher level of torque compensation and acceleration make a bigger acceleration

### 13. Turbo Timing:

The Turbo timing can additionally increase the motor rpm. It will initiate at full throttle. It is usually used on a long straight road to release the maximum power of the motor. The higher this value is, the more the rpm of the motor will increase, and the greater the running current will be, the higher the temperature of the motor and esc. Therefore, please set this value reasonably.

### 14. Turbo delay:

It refers to the duration of continuous full throttle required to trigger Turbo. When the full throttle time reaches this set value, Turbo can be triggered to turn on.

### 15. Neutral Range of Throttle:

Neutral range could be adjusted according to usage habits. Neutral range may deviate in some radio control, leading to move forward or reverse slowly. If this happens, neutral range needs to be set larger.

### 16. PLine1:

Parameters can be tuned by PWM with X.BUS. PWM width 1ms-2ms supported. Assuming Pline1 is acceleration item, if the width of PWM is set as 1ms, then acceleration level is set to 0; if width of PWM is set as 2ms, then acceleration is set to 12-level. Apply X.BUS in Pline1 if you want to put X.BUS into use.

### 17. X.BUS-ID:

Set the slave ID for this ESC. Supporting communication for 16 ESCs

### 18. Cooling Fan:

Temperature Control: Fan starts and stays off upon ESC temperature.

On: Fan starts when ESC is power on

### 19. Motor Parameter Identification:

Off by default. If "On" is desired, select "On", then click "save", the ESC will start calibrating. Successful calibrating comes with audible alert "do-ri-mi" twice, then the ESC will re-start.

## 8. Recover factory parameters:

### How to restore Bluetooth to factory settings:

If the Bluetooth password is lost or if you need to forcibly enter Boot, please follow the instruction:

- 1: Connect ESC wire(the white wire) to BEC+(red wire)
- 2: Turn on ESC
- 3: Disconnect from BEC when green light off and red light on
4. Remove short circuiting

When boot activated, the status of Bluetooth will restore to factory value(password will be restored to "1234", and the name will be restored to the factory state), then restart ESC, If there is a hardware error, Boot can be activated in this way to upgrade hardware.

### How to restore parameters to factory settings:

If you want to restore the parameters to factory settings, just click the default button on the APP parameter page.

## 9. LED status & beep instructions:

Item	Type description	Light cue	Sound cue	Remark
Basic information	Throttle not zeroed	Red light flashes quickly	Short tone "beep"	Red light flashes quickly
	Throttle signal lost	Red light flashes slowly	Long tone "beep"	In cycle of 2s
	Voltage detection	Low voltage protection (Redx1 Greenx2) ...	Long tone "beep" x1, Short tone "beep" x2	Check the input voltage or setting of number of cells if no "beep" before MOSFET detecting.
		Over voltage protection (Redx1 Greenx3) ...	Nil	Voltage is too high, check whether the voltage is over the withstand value of ESC
	The MOS temperature is too high, operating temp. > 125 °C / startup temp. > 110 °C	(Redx1 Greenx4) ...	Long tone beepx1, short tone beepx4	The temperature of MOS is too high. ESC can resume normal operation when the temperature drops below 100 degrees Celsius
	The capacitor temperature is too high, operating temp. > 105 °C / startup temp. > 100 °C	(Redx1 Greenx5) ...	Long tone beepx1, short tone beepx5	The temperature of capacitor is too high. ESC can resume normal operation when the temperature drops below 100 degrees Celsius
Throttle parameters	Abnormal throttle parameters	(Redx1 Greenx7) ...	Long tone beepx1, short tone beepx7	If there is still an abnormal prompt when positioning throttle to neutral point, throttle calibration process needs to be initiated.
Hall sensing abnormality	Hall output logic abnormality	(Redx1 Greenx8) ...	Long tone beepx1, short tone beepx8	Re-plug Hall wire. If the abnormality persists, it may be a problem with the internal Hall of the motor, and the Hall wire needs to be unplugged.
Throttle parameter	Throttle calibration prompt	Calibrate low range (Red Green) ...	Nil	If the calibration process is irregular or unsuccessful, the ESC will exit the calibration process and enter the normal Startup process.
		Calibrate high range (Green) ...		
		Calibrate neutral throttle (Red) ...		
		Calibration success (Red Green) x4	(so-mi-do) x4	
Normal operation	All normal and no action to throttle	(Green) ...	Nil	
	Throttle operation	Normal The greater the accelerator, the faster the green light flashes		
		Turbo timing is on Green light remains on		
Braking	Red light is on	Nil		Red light off when release brake
Boot	Entering boot forcibly		Nil	Follow the process of Bluetooth factory reset
	Boot in progress	Green light: On 2s&Off 2s	Nil	CPU enter Boot mode
		Red light remains flashing		CPU enter Boot, program upgrade in progress
Normal startup	Prompt for the number of battery cells after normal startup	Quinary prompt light signal, long tone with red light on, short tone with green light on	do, mi, so + quinary prompt sound	do, mi, so: prefix of quinary number Quinary definition Long tone = 5 cells, short tone = 1 cell Example: 8-cell lithium battery prompt sound do, ri, mi + long tone x1 + short tone x3
Fault warning	ESC self check abnormality	(Redx2) ...	Nil	Disconnect the motor wires, power on. If it is still abnormal, return it for maintenance
		(Redx2 Greenx1) ...	Nil	
		(Redx2 Greenx2) ...	Nil	

### \*Notes:

1. Red light matches long tone, green light matches short tone.
2. For saving power, all "beep" lasts for 5mins; if all fault recovered, it takes effect again in next 5 mins.
3. Ellipsis "..." in light cue represents repetition of previous action.



## Instructions For GL4990 Sensored Brushless Motor For RC Cars

www.xc-bldc.com



### Disclaimer

First of all, thank you for using XC-ESC product. Please read this statement carefully before use. Once used, you shall be deemed to have agreed all the terms of this statement. Please strictly follow the instructions in the manual when using this product. We shall not assume any responsibility arising from the use of this product, unauthorized modification and improper operation of this product, including but not limited to indirect losses or joint liability. We have the right to change the product design, appearance, performance and use requirements without notice.



### Warnings


Please refer to the manual of power devices and vehicles to ensure a reasonable power configuration and avoid motor overload and personal injury due to incorrect power configuration. Do not run the motor at high speed without load for a long time, as it may cause damage to motor. Do not keep the temperature of the motor case above 100 degrees Celsius for long periods, as high temperatures may cause rotor demagnetization resulting in irreparable damage to motor.

## 1 . Features

- Outstanding magnetic circuit combining with ultrathin silicon steel and high slot fill factor of high temperature resistant enameled wire winding will effectively reduce losses, improve efficiency and reduce operating temperature of motor.
- Special rotor winding process with explosion-proof, high precision balance for increasing rotor's service life and high-speed stability
- High precision bearings, reinforced alloy aluminum shell and high toughness stainless steel shaft improves motor's structural performance.
- Innovative waterproof design at driving end achieves excellent waterproof and dust-proof performance

## 2 . Specification

Model	GL4990
KV	1500KV
Cell	3~8
No-load Current (Test Voltage: 10kV)	≤6.5A
Weight	672 g
Outer diameter/Length	Ø49mm(1.929in)/L90mm(3.543in)
Shaft diameter/ End length of shaft	Ø5mm(0.197in)/L18.5mm(0.728in)
Bearings	Front(driving end):D19*d8*T6 Rear(wire outlet end):D19*d8*T6
Pairs of poles	2
Applicable to	1/6 Crawler

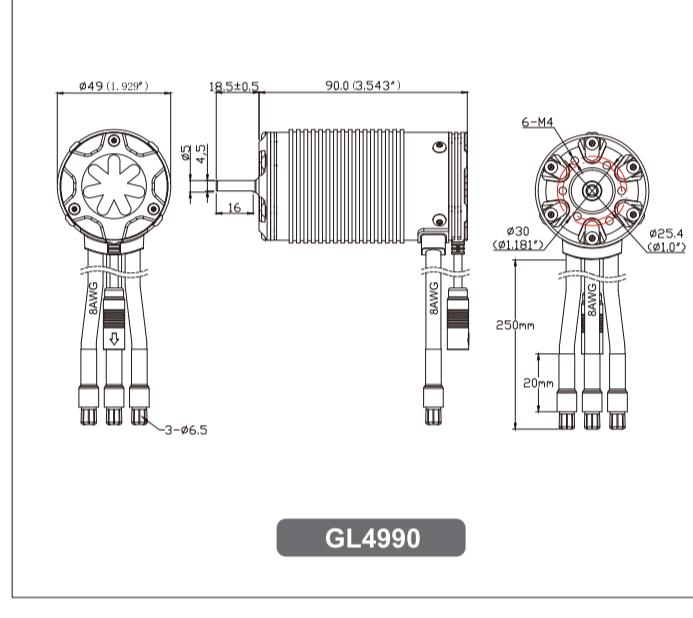

## 3 . Installation & connection


### 1. Install the motor

There are 6 screws in M4 specification, and the mounting holes are 6.0mm in depth. Before installing, please carefully confirm whether the specification of the screws is suitable for the thickness of the motor mounting plate to avoid assembly abnormality or abnormal operation of motor due to overlong screws.

### 2. When connecting the motor and esc

When connecting the motor and esc, please pay attention to the marked three-phase A, B and C to ensure that the three wires of the motor and esc are connected correspondingly. Otherwise, it cannot run normally and even damage the esc and motor.

That is: Wire A of the esc matches wire A of the motor, wire B of the esc matches wire B of the motor, wire C of the esc matches wire C of the motor.

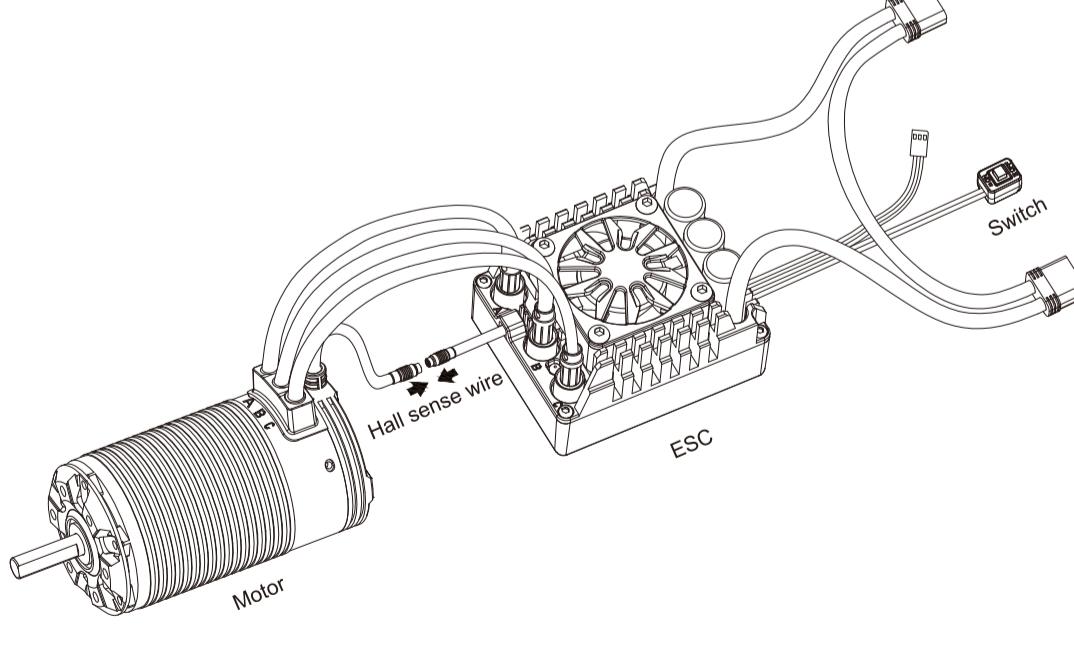

## 4 . Gearing

Reasonable selection of gear ratio is very critical. Improper gear ratio may cause you great loss.

### 1. The operating temperature of the motor

The motor temperature should be lower than 100 degrees Celsius in operation. Because high temperature may reduce the magnetism of rotor, and cause short circuit due to coil melting partly resulting in ESC damage. A proper gear ratio can effectively prevent the motor from overheating.

### 2. Gear ratio selection

Go through the manual of RC vehicle, and pair the gears according to recommended gear ratio. If the motor and ESC temperature always stay at a low level during the running, you can change a big pinion and monitor the motor and ESC temperature to ensure that the new pairing is suitable for your vehicle.